

# Laser Bore Sight Series Instrusction Manual

Congratulations on buying our Laser Bore Sight Series, Accurate, Easy & Convient to operate, Pocketable, Time & AMMO saving the most advanced instrument for your rifle sighting!

## Series Available

25-60REM (Fitting Calibers: 270WIN, 30-06SPR, 35Whelan, 8MM-06, 338-06, 280REM, 7MM EXPRESS, 7.7JAPANESE)  
 243WIN (Fitting Calibers: 260REM, 308WIN, 358WIN, 356, 307, 6MMREM, 257ROBERTS, 257ROBERTS IMPROVED, 7MM-08, 8MM MAUSER, 7X57MM MAUSER, 284WIN)  
 264WIN (Fitting Calibers: 7MMREM, 8MMREM, 338WIN)  
 300WIN (Fitting Calibers: 8MMREM, 385REM, 350REM, 300H&H, 375H&H)  
 223REM (Fitting Calibers: 222REM, 6X47MM, 5.6X50MM)  
 7.62 × 39MM 12GA 20GA 7 × 57MM 8 × 57MM 6.5 × 55MM 9.3 × 62MM 6.5 × 57MM 7 × 64MM  
 8 × 68MM 375H&H 416R 30R 8 × 57JRS 7 × 65R 9.3 × 74R 6.5 × 68 270WSM 5.6 × 50R 22-250  
 300WBY 300WSM 303 30-30 7.62 × 54R

## Specification:

Laser Wavelength: 632-650nm  
 Power: <1mw  
 Battery: 2x AG5(2x Sr48) or equals, 3 x Ag3 or equals, Voltage 3-5V  
 Battery Life: About one hour  
 Range for Sighting: 15-100 yards  
 Dot Size: 2" @ 100yards  
 Switches: On/Off end cap or Pin Switch end cap

## Warning:

- Laser may cause eye injury;
- Avoid looking directly into laser;
- Avoid Shining at mirrors;
- Avoid aiming at any person or animal' s eyes;
- Avoid strong hitting and dropping on hard ground;
- Always unload your rifle/hand gun before singting.

## How to operate:



Batteries & Sleeve  
(2xAG5, 3xAG3 or Equals)



Bore Sight Body & Battery Pack



Bore Sight Body & End Cap

① Put the batteries into the sleeve, ② Place the battery pack into the housing of Bore Sight Body. ③ Insert the end cap by turning clockwise until seated securely. Do not over tighten as it may damage the threads.

## For the On/Off End Cap Model:

The laser is now activated. Place the bore sight into the chamber of the rifle or pistol to be sighted, chose the bolt slowly. If the bore sight fits the snug in the chamber it is not necessary to have the bolt closed.


## For the Pin Switch End Cap Model:

Place the bore sight into the chamber, close the bolt slowly until the laser is activated.

Located a target 20-30 yards away that you can see the laser reflecting on. The laser Point is the theoretical point of impact. Zero the windage & elevation of your scope or sight on the laser point. Remove the bore sight from the chamber after sighting and turn off the laser. Store the battery pack, bord sight and instructions in the protective carry pouch.

## Each includes:

Bore Sight 1pc  
 Battery 2pcs(Ag5)  
 Sleeve 1pcs  
 Carry Pouch 1pc

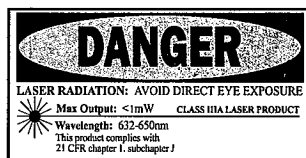

Made in China

