



Congratulations on the purchase of one of the most effective, economical, and simple ways of adding water motion to your water set of waterfowl decoys.

Ducks see motion about 3 ½ times better than they see still objects plus live ducks splash the water and you need to do the same to make your decoy spread look natural to them.

The TRIPLE WHAMMY is a small, very portable, battery powered device that attaches to any decoy support pole near the water surface and rotates a magnetically connected blade (legs) inserted slightly into the water to agitate the water surface.

All of us waterfowl hunters seem to have plenty of decoy support poles in and around our spread, so the Triple Whammy is designed to attach to most any round or square pole (not included) by use of a specially designed clamp tightened by a convenient, easy to use grip knob.

We call it the TRIPLE WHAMMY because it:

1. Makes ripples on the water like live ducks.
2. Throws droplets of water into the air which are highly visible to other ducks.
3. The blade (leg) is dark on one side, white on the other and turns fast enough to produce SWD flash or strobe.

That is a lot of action in a small package.

Equipped with a 3-way switch (Cycle I - Off - Cycle II). The center position functions as the off button. Cycle I is more of a normal agitation with 5 seconds on/ 5 seconds off. Cycle II is a more aggressive agitation with 8 seconds on/3 seconds off.

It will operate for up to 10 hours on 4-AA batteries (not included) which are housed in a convenient removable waterproof plug-in battery compartment.

A special circuit reverses the direction at each on/off cycle which causes the water motion to change sides for added realism.

Furnished with a convenient blade holder to protect the blade when not in use.



To use the Triple Whammy, remove the blade from the blade holder on the outside of the housing and insert the female hub over the male motor shaft and it will magnetically connect. Loosen the pole clamp with the grip knob and insert it around any typical decoy support pole and position it to where the blade is inserted into the water to the mark on the blade (approximately 7/16" from end).

Turn the switch to either Cycle I or Cycle II depending upon hunting conditions.

That is all there is to using it. Simple! Effective! As you hear MOJO® say over and over, you must let the ducks tell you how much motion they want at any given time.

Check out videos and tips of this product and our complete line of spinning wing and motion decoys at www.mojoooutdoors.com.